


Fitting / replacing the batteries

⚠ NOTICE!

The batteries must be replaced as soon as the red warning LED **10** on the front of the safe lights up.

Proceed as follows to fit / replace the batteries:

- Open the safe using your personal code or an override key (see section: "Opening the safe" and "Opening by override keys").
- Remove the battery compartment cover **A**.
- Insert / replace the batteries. Ensure that the batteries are correctly inserted according to the marking on the battery holder.
- Re-program your personal code (see section: "Personal code" and "Opening by override keys").
- Dispose of the used batteries in an environmentally friendly manner.

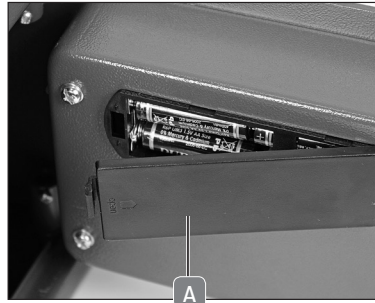

You must re-program your personal code every time you change the batteries.

Personal code

Proceed as follows to set your personal code:

- Open the safe by using the override keys (see section: "Opening by override keys").
- Press the red set button **7** on the inside of the safe.
- Enter a three to eight digit PIN and press the * or # button on the keyboard to confirm.
- The safe is now programmed and ready for use.



The PIN must always be confirmed by pressing the * or # button in order to gain entry to the safe.