

# Coffee Grinder

## Choose your Grind Size:

This coffee grinder is adjustable so you can grind your coffee beans as coarse or as fine as they need to be for your chosen appliance.

To change the grind size, unscrew the top nut (1), then unscrew and remove the handle (2).

From there remove the mounting retainer (3). Now you are free to turn the adjustment wheel (4), up or down for your desired grind.

By turning the wheel down, you will make a fine grind. Middle for medium and up for a coarse grind.

**You only need to adjust this a small amount.** Do not turn the adjustment wheel too far up or the beans won't grind properly.

Once you have your desired grind, assemble back together, add your beans to the funnel, hold the base firm and turn the handle clockwise.

**Note:** Please ensure clip lid lock is securely closed before grinding the beans. Do not overfill funnel past the rim.

Care and Use: Wipe clean only.



## Choose a Grind Size:

Fine: Espresso



Medium: Filter



Coarse: French press



**WARNING:**  
DO NOT PUT FINGERS  
INTO THE GRINDER.  
DO NOT USE TO GRIND  
ANYTHING OTHER  
THAN COFFEE BEANS.