




moorelarge

**FOLDING/UNFOLDING
QUICK START GUIDE**

Thanks and Congratulations for purchasing a folding bike!
Your new bicycle is designed to guarantee the maximum comfort, reliability and safety.
It is based on continual research and innovation.

With a little practice, you should be able to fold your bike quickly and easily.

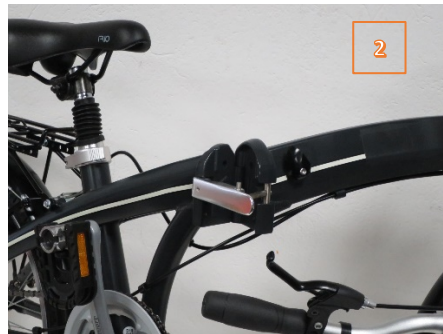

Swing your frame together.

Tighten the quick release latch by pressing down the lever firmly.

NOTE: This lever should be tightened facing down as pictured to avoid interfering with your legs while pedaling. (3)


NOTE: You can adjust the tension on the quick release levers by loosening or tightening the lever mechanism itself.

Do not overtighten.

Tighten the stem with Allen key provided (4)



Swing handlebar post up to vertical (5).

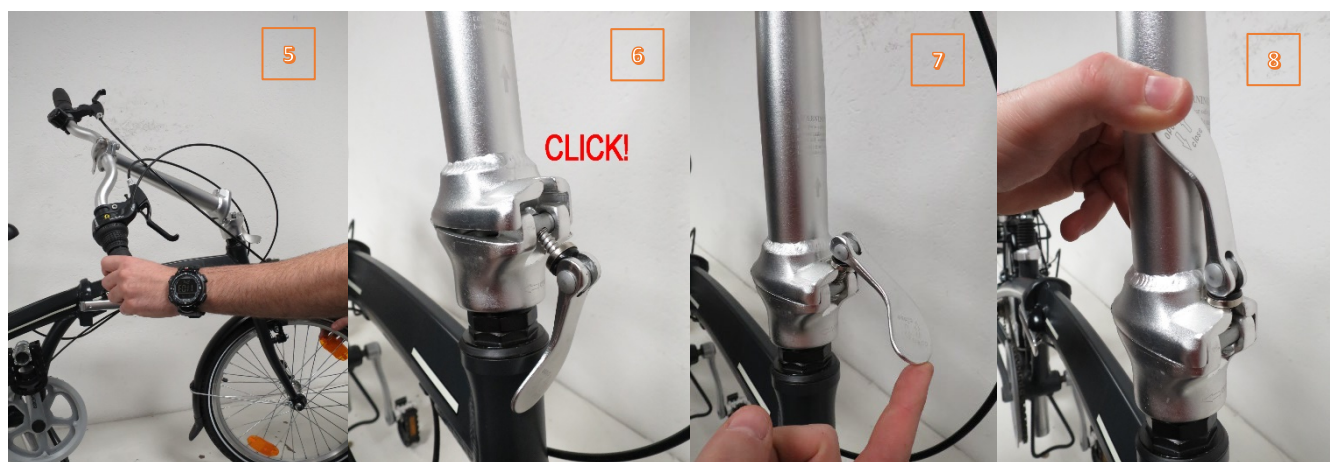


Make sure the quick release bolt snaps into the handlebar folding box (6). Then make sure the QR lever is tight before moving to the lock position. You may need a 10mm spanner to hold the nut whilst you turn the QR lever clockwise to tighten. **If in any doubt call 01332 274242** (8).

NOTE: You can adjust the tension on the quick release levers by loosening or tightening the lever mechanism itself.

Do not overtighten (7) (8)

The handlebar can be adjusted by the quick release on top of the stem (9) (10)

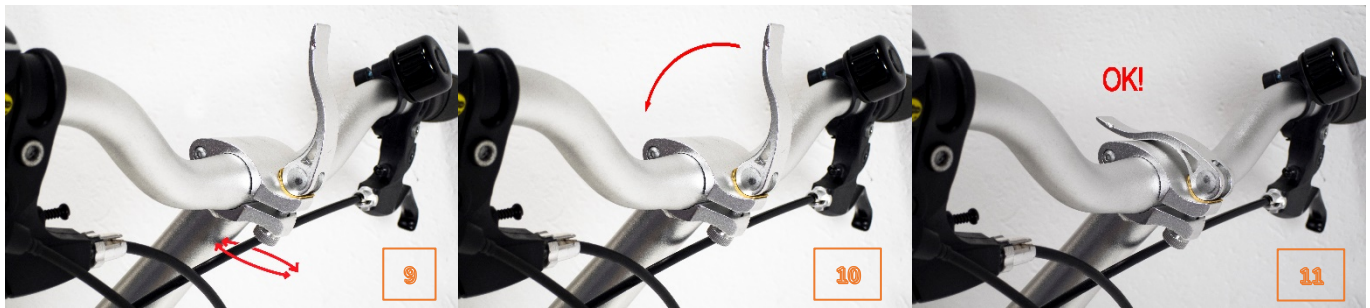

Tighten the quick release latch by pressing down the lever firmly (11)

To install the pedals, stand over or behind the bike to determine the left side and the right side.



Kneel down at the right-hand side of the bike (the side with the chain) and present the left pedal (marked with an 'L' sticker) to the left hand crank. Push the provided Allen key through the threaded hole in the crank and into the socket at the threaded end of the pedal. Attach the pedal to the crank by turning the Allen key clockwise. (12)



Now kneel at the left-hand side of the bike and present the right pedal (marked with an 'R' sticker) to the right hand crank. Push the provided Allen key through the threaded hole in the crank and into the socket at the threaded end of the pedal. Attach the pedal to the crank by turning the Allen key **anti-clockwise**. (13)



to unfold the pedals, pull and lift pedal step upward as in the images (12) (13)

To unfold your bicycles, follow these instructions in reverse. Practice the folding and unfolding process and it will become easy and intuitive. Now you can enjoy the additional possibilities of folding convenience with your new bike.

Before riding check the tyre pressure and inflate if necessary with the supplied pump which can be found under the right hand side of the pannier rack top.



For others information you can check the standard owner manual attached to this one.

If in any doubt consult your local qualified professional bicycle mechanic for service.

MOORE LARGE CUSTOMER SERVICE: 01332 274242

